

# NITTAN

## evo+

## Remote Terminals



**Product Manual**

The operation and functions described in this manual are available from Software Version 5000-050-04 onwards.

[www.nittan.co.uk](http://www.nittan.co.uk)

## Version History

Revision	Implemented by	Revision Date	Approved by	Approval Date	Reason for update
01	G Howe	07-12-2015	Nittan	07-12-2015	New Document
02	G Howe	20-04-2022	Nittan	20-04-2022	FM Updates and RFCs 1092, 1231

## Nittan Devices

This document lists the Nittan Evolution devices that are compatible with the evo+5000 range of Fire Alarm Control Panels (FACP).

It also highlights any specific requirements and technical information.

## Disclaimer

*Every care has been taken by Nittan Europe Ltd in compilation of the data contained herein and in verification of its accuracy and compliance when published, however the content of this manual is subject to change. This publication should, therefore, be checked against the Nittan Europe Ltd publications database to make sure that it contains the latest data. For example, the products referred to in this publication are continually improved through further research and development, this may cause information contained in this manual to be altered or discontinued.*

## Copyright

*This publication, the data, the procedures and components mentioned within are copyright protected by Nittan Europe Ltd © 2022.*

*Any distribution, copying or re-branding of this publication without specific written consent of Nittan Europe Ltd will constitute an infringement of copyright.*

# NITTAN

**Nittan Europe Ltd.** Tel: +44 (0) 1483 769 555  
Hiple Street, Fax: +44 (0) 1483 756 686  
Old Woking, Email: [sales@nittan.co.uk](mailto:sales@nittan.co.uk)  
Surrey, GU22 9LQ Web: [www.nittan.co.uk](http://www.nittan.co.uk)  
United Kingdom

## List of abbreviations

Term	Description
CIE	Control and Indicating Equipment
DIP	Dual In-line Package
FACP	Fire Alarm Control Panel
N/C	Normally Closed
N/O	Normally Open
SAM	Sensitivity Adjust Mode
SCI	Short Circuit Isolator
SSM	Special Sensitivity Mode

## Specifications:

Item	Specification Details		
	<i>evo+5010</i>	<i>evo+5020</i>	<i>evo+5030</i>
Enclosure	Steel IP30 RAL7035	Steel IP30 RAL7035	Steel IP30 RAL7035
Dimensions H x W x D mm	218 x 300 x 42	218 x 300 x 42	263 x 300 x 42
Weight (excluding batteries)	2.1Kg	2.1Kg	2.5Kg
Temperature	-5°C to 40°C	-5°C to 40°C	-5°to 40°C
Humidity (RH)	95 % Max	95 % Max	95 % Max
Cable Entries (20mm knockouts)	4x top / 4x bottom rear	4x top / 4x bottom rear	4x top / 4x bottom rear / 2 bottom
DC Power Supply Voltage	24 VDC, Operating range 15-30V	24 VDC, Operating range 15-30V	24 VDC, Operating range 15-30V
DC Supply Current (Maximum)	115mA (/FT: 150mA)	115mA (/FT: 150mA)	115mA (/FT: 150mA)
DC Supply Current (Quiescent – backlight dimmed)	70mA (/FT: 105mA)	70mA (/FT: 105mA)	70mA (/FT: 105mA)
Supply Monitoring	Monitored External Fault Input	Monitored External Fault Input	Monitored External Fault Input
Number of Fire Zones	2000 'Dynamix'	2000 'Dynamix'	2000 'Dynamix'
Display	Backlit 240 x 64 graphical LCD		
LED Indicators	2 Red (1 x Fire, 1 x More Alarms), 1 Green (Power) & 3 Yellow (Fault & Status)	2 Red (1 x Fire, 1 x More Alarms), 1 Green (Power) & 3 Yellow (Fault & Status) – Optional 1 bi-colour Red/Yellow and 3 Yellow (Status)	2 Red (1 x Fire, 1 x More Alarms), 1 Green (Power), 6 bi-colour Red/Yellow (Status) & 18 Yellow (Fault & Status)
Keypad	Alpha Numeric Keypad, Navigation Keys	Alpha Numeric Keypad, Navigation Keys	Alpha Numeric Keypad, Navigation Keys
Controls	System Key for Mute	System Keys for Mute, Silence, Reset & Resound & More Alarms	System Keys for Mute, Silence, Reset & Resound & More Alarms – 6 Optional Programmable keys
Serial port	USB only	USB only	USB and RS232
EN54-13 Component Type	Type 2	Type 2	Type 1
Event Log	1000 Event & Diagnostic + 500 Fire		
Approvals	VdS G210022		

As our policy is one of constant product improvement the right is therefore reserved to modify product specifications without prior notice


<b>Table of Contents</b>		<b>Page</b>
<b>1</b>	<b>INTRODUCTION .....</b>	<b>6</b>
1.1	STANDARDS.....	6
1.2	CAUTIONS AND WARNINGS .....	7
1.3	DESCRIPTION .....	7
1.3.1	evo+5000 Series.....	7
1.4	EN54 FUNCTIONS .....	8
1.4.1	EN54 Optional Features with Requirements.....	8
1.5	INSTALLATION APPROVALS.....	9
1.5.1	Fire System Installations.....	9
1.5.2	Wiring Regulations.....	9
<b>2</b>	<b>OPERATION .....</b>	<b>10</b>
2.1	UK REMOTE TERMINAL FASCIA.....	10
2.1.1	evo+5010.....	10
2.1.2	evo+5020.....	10
2.1.3	evo+5030.....	10
2.2	CONTROLS AND INDICATIONS.....	11
2.2.1	Graphical Display.....	11
2.2.2	LED Status Indicators .....	12
2.2.3	Control Buttons .....	13
2.2.4	Navigation Buttons.....	14
2.2.5	Number and Letter Buttons.....	14
2.2.6	Buzzer.....	14
2.3	ACCESS LEVELS .....	14
2.3.1	Changing from Access Level 1 to Level 2.....	15
2.3.2	Changing from Access Level 2 to 1 .....	16
2.4	USER MENU FUNCTIONS .....	16
2.4.1	View .....	16
2.4.2	Disable.....	16
2.4.3	Enable.....	16
2.4.4	Test.....	17
2.4.5	Print .....	17
<b>3</b>	<b>INSTALLATION .....</b>	<b>18</b>
3.1	IDENTIFICATION OF PARTS .....	18
3.1.1	evo+5010 / evo+5020 .....	18
3.1.2	evo+5030.....	18
3.2	INSTALLING THE ENCLOSURE.....	19
3.2.1	Opening the Enclosure Cover.....	19
3.2.2	Removing the Chassis .....	19
3.2.3	Mounting the Enclosure .....	19
3.2.4	Remounting the Chassis.....	20
3.2.5	Recommended Cable Routing Arrangement .....	20
3.3	WIRING INSTALLATION.....	21
3.3.1	DC Power Installation .....	21
3.3.2	Network Interface.....	22
3.3.3	Switch Inputs.....	22
3.3.4	RS232 Interface.....	23
3.3.5	USB Interface.....	23
<b>4</b>	<b>PROGRAMMING.....</b>	<b>24</b>
4.1	INTRODUCTION.....	24
4.1.1	Access Levels .....	24
4.1.2	Memory Lock .....	24
4.1.3	Navigating through menus.....	24
4.1.4	Changing Text Descriptions.....	25
4.1.5	Numeric data entry.....	26

<b>4.2</b>	<b>LEVEL 3 MENU FUNCTIONS</b> .....	<b>26</b>
4.2.1	PC ONLY Functions.....	26
<b>4.3</b>	<b>RECOMMENDED PROGRAMMING PROCEDURE</b> .....	<b>27</b>
4.3.1	Zones.....	27
4.3.2	Exit.....	27
4.3.3	View Options.....	27
4.3.4	Passwords .....	28
4.3.5	Time and Date .....	28
4.3.6	PC Config.....	28
4.3.7	Setup .....	28
<b>5</b>	<b>SERVICE AND MAINTENANCE</b> .....	<b>31</b>
<b>5.1</b>	<b>MAINTENANCE SCHEDULE</b> .....	<b>31</b>
5.1.1	Daily Actions .....	31
5.1.2	Monthly Actions.....	31
5.1.3	Quarterly Actions .....	31
5.1.4	Annual Actions.....	31
<b>5.2</b>	<b>REPLACEMENT OF COMPONENTS</b> .....	<b>32</b>
5.2.1	Liquid Crystal Display .....	32
5.2.2	Spares.....	32
<b>6</b>	<b>APPENDICES</b> .....	<b>33</b>
<b>6.1</b>	<b>APPENDIX 1 – FORGOTTEN LEVEL 3 PASSWORD</b> .....	<b>33</b>
<b>6.2</b>	<b>APPENDIX 2 – RECOMMENDED FIRE RATED CABLES</b> .....	<b>34</b>
6.2.1	Network Cables.....	34

## 1 Introduction

### 1.1 Standards

Nittan Europe Ltd declares that the products identified below conform to the essential requirements specified in the Construction Products Regulation 305/2011/EU:

	<b>D.o.P. evo+ 5000</b> 19
EN54-2: 1997 +A1:2006 Control and indicating equipment for fire detection and fire alarm systems for buildings  Provided options: <ul style="list-style-type: none"> <li>- Outputs to Fire Alarm Devices</li> <li>- Output to Fire Routing Equipment</li> <li>- Output to Fire Protection Equipment</li> <li>- Output to Fault Routing Equipment</li> <li>- Investigation Delays to Outputs</li> <li>- Dependency on more than one alarm signal</li> <li>- Fault Signals from Points</li> <li>- Disablement of Points</li> <li>- Alarm Counter</li> <li>- Test Condition</li> <li>- Standardised Input / Output</li> </ul>	
EN54-4: 1997 +A1:2002 +A2:2006 Power supply equipment for fire detection and fire alarm systems for buildings	
Mx-5030, Mx-5030/FT,	

In addition, the products comply with the following:

Low Voltage Directive 2014/35/EU

BS EN62368-1: 2014 +A11:2017

Audio/video, information and communication technology equipment. Safety requirements.

Electromagnetic Compatibility Directive 2014/30/EU

EN61000-6-3: 2007 +A1:2011

Emissions, Class B

EN50130-4: 1995 +A1:1998 +A2: 2003

Immunity, Product Family Standard

EN50130-4: 2011 +A1:2014

Immunity, Product Family Standard

## 1.2 Cautions and Warnings



BEFORE INSTALLATION – Refer To the Ratings shown on the label inside the product and to the ‘Specifications Chart’ in this document. Please read this manual carefully. If you are unclear on any point DO NOT proceed. Contact the manufacturer or supplier for clarification and guidance.



Only Trained service personnel should undertake the Installation, Programming and Maintenance of this equipment.



This product has been designed to comply with the requirements of the Low Voltage Safety and the EMC Directives. Failure to follow the installation instructions may compromise its adherence to these standards.



This equipment is constructed with static sensitive components. Observe anti-static precautions at all times when handling printed circuit boards. Wear an anti-static earth strap connected to panel enclosure earth point. Before installing or removing any printed circuit boards remove all sources of power (mains and battery).



Where you see the “PC Only” symbol, these features can either only be set-up using the PC Configuration Tool or there are additional options that are only available via the PC Configuration Tool.

## 1.3 Description

This manual covers the installation, programming and operation of the *MxPro 5 Series* Remote Control Terminal Panels. This manual provides generic programming and installation information.

Refer to the User Manual (Document No. NT680-166) for additional details of how to operate the fire alarm control panel.

### 1.3.1 evo+5000 Series

The *evo+5010* is a basic Remote Display Terminal.

The *evo+5020* is a basic Remote Control Terminal.

The *evo+5030* is a full function Remote Control Terminal.


The *evo+5030* model fully supports the requirements of EN54-2 Clause 11 (Standardised I/O) for both indication and control. It is classed as an EN54-13 Component Type 1 and can be used as the primary display of the fire alarm system installation.



The *evo+5010* and *evo+5020* models support the requirements of EN54-2 Clause 11 (Standardised I/O) and are classed as an EN54-13 Component Type 2 for supplementary indication – refer to section 0 for details of the indications and controls supported in each model.

Install the panel in accordance with the instructions in Section 3 and then program the operation in accordance with the instructions detailed in Section 0.

The basic operation is indicated in Section **Error! Reference source not found.** and is fully detailed in User Manual NT680-166 which is common to all of the *evo+5000* control panels.


## 1.4 EN54 Functions


	<p>The Remote Terminal Panels in conjunction with the Mx-5000 Control Panels are compliant with the requirements of EN54-2 (1997) and EN54-13 (2005). In addition to the basic requirements, the following optional functions are provided and these comply with the requirements of EN54.</p>
---	--


	C.I.E Optional Functions		EN54-2 Clause
	Indication	Outputs to Fire Alarm Devices	7.8
	Outputs	Outputs to Fire Routing Equipment	7.9
	Controls	Investigation Delays to Outputs	7.11
		Co-incidence Detection	7.12
		Alarm Counter	Type B & Type C 7.13
		Fault Signals from Points	8.3
		Output to Fault Routing Equipment	8.9
		Disablement of Points	9.5
		Test Condition	10
		Standardised I/O	11


### 1.4.1 EN54 Optional Features with Requirements

In addition to the mandatory requirements of EN54 Part 2, the Remote Terminal Control and Indicating Equipment (C.I.E) supports the indication and control of the following optional features with requirements: -


 <p>Section 7.8</p>	<p>Outputs to Fire Alarm Devices.</p> <p>The Remote Terminal C.I.E has provision for the indication of conditions relating to fire alarm device outputs. It is possible to Silence and Re-sound the alarms at Level 2.</p>
--	--

 <p>Section 7.9</p>	<p>Outputs to Fire Routing Equipment.</p> <p>The Remote Terminal C.I.E has provision for the indication of conditions relating to the transmission of the fire alarm condition to a remote receiving station such as the fire brigade office.</p>
--	---

 <p>Section 7.10</p>	<p>Outputs to Fire Protection Equipment.</p> <p>The Remote Terminal C.I.E has provision for the indication of conditions relating to the transmission of the fire alarm condition to fire protection equipment.</p>
---	---


 <p>Section 7.11</p>	<p>Delays to Outputs.</p> <p>The Remote Terminal C.I.E has provision for the indication of conditions relating to Output and Investigation Delays.</p>
---	--



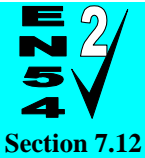

Coincidence Detection.

The Remote Terminal C.I.E has provision for the indication of Coincidence Detection. Types B and C are supported in the Mx-5000 Series control panels.

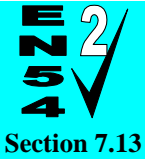

Alarm Counter.

The Remote Terminal C.I.E has provision to record the number of times that the fire alarm condition is entered.



Fault Signals from Points.

The Remote Terminal C.I.E has provision for the indication of conditions relating to fault signals from points. These are indicated on a per zone basis.




Outputs to Fault Routing Equipment.

The Remote Terminal C.I.E has provision for the indication of the conditions relating to the transmission of the fault condition to a remote receiving station such as the service centre office.




Disablement of Points.

The Remote Terminal C.I.E has provision for enabling and disabling signals from points over the *Ad-Net* Network.

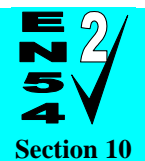

Test Condition.

The Remote Terminal C.I.E has provision for enabling the testing of the installation on a per zone basis over the *Ad-Net* Network.

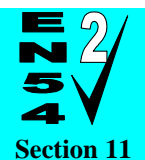

Standardised Input/Output interface.

The Remote Terminal C.I.E provides the Standardised I/O interface for the indication and control of the mandatory conditions over the *Ad-Net* Network.

## 1.5 Installation Approvals

### 1.5.1 Fire System Installations

The panel must be installed and configured for operation in accordance with these instructions and the applicable code of practice or national standard regulations for fire systems installation (for example BS5839-1: 2002) appropriate to the country and location of the installation.

### 1.5.2 Wiring Regulations

The panel and system must be installed in accordance with these instructions and the applicable wiring codes and regulations (for example BS7671) appropriate to the country and location of the installation.


## 2 Operation

The operation of the remote terminals and the available controls and indications are identical to those of the evo+5000 Series Control Panels. For full details, refer to the User Manual NT680-166.


The following information identifies the buttons and indications available on each variant of the remote terminals. The fascia layouts for the standard UK Remote Terminal Panels are as follows:

### 2.1 UK Remote Terminal Fascia


#### 2.1.1 evo+5010

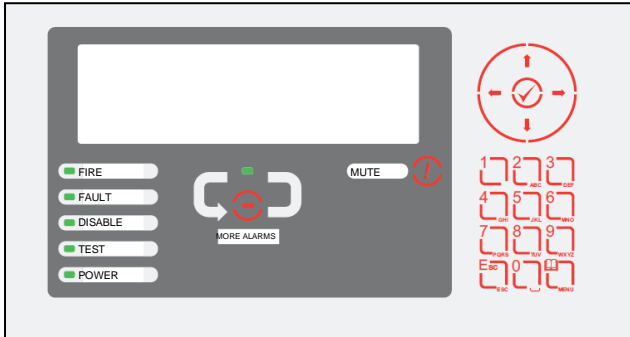

#### 2.1.2 evo+5020

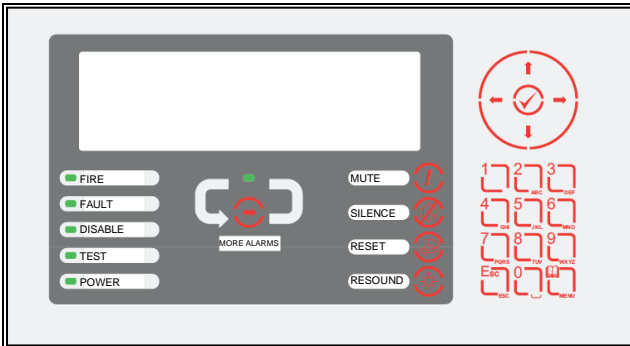

#### 2.1.3 evo+5030

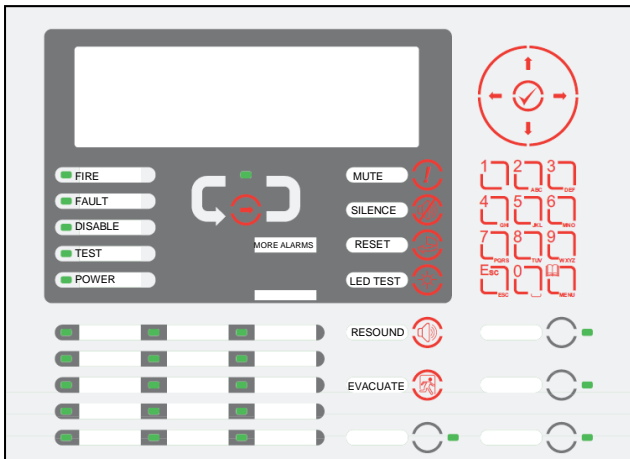

Slide-in labels are used to annotate Function Indicators and Programmable Control Keys and Indicators.

## 2.2 Controls and Indications

### 2.2.1 Graphical Display

The graphical display provides detailed information of the source of fire alarms, faults and warnings. It also shows menus for use when inspecting or programming the operation of the panel.

Under normal conditions the panel display shows the access level, time, date and status: -



For full details, refer to the User Manual NT680-166.

## 2.2.2 LED Status Indicators

The LED Status Indications show the basic operational state of the panel and whether the panel is in a fire alarm, fault, disabled or test condition.

 








Function	5010	5020	5030	Colour	Description
FIRE	✓	✓	✓	Red	Indicates that the system has detected a fire alarm condition
MORE ALARMS	✓	✓	✓	Red	Indicates that the system has detected a fire alarm condition (on steady) in more than one zone.
Fault	✓	✓	✓	Yellow	Indicates that the system has detected a fault condition
Disable	✓	✓	✓	Yellow	Indicates that part of the system has been disabled (i.e. isolated)
Test	✓	✓	✓	Yellow	Indicates that part of the system is in a test condition
Power	✓	✓	✓	Green	Indicates the presence of power
Fire Routing Activated	✗	✗	✓	Red	Indicates that the output to call the Fire Brigade has been Activated
Fire Routing Fault	✗	✗	✓	Yellow	Indicates that there is a fault condition in the Fire Brigade signalling equipment.
Fire Routing Disabled	✗	✗	✓	Yellow	Indicates that the output signal to the Fire Brigade is Disabled
Pre-Alarm	✗	✗	✓	Yellow	Indicates that a smoke or heat detector has detected a change in the environment that may develop into a possible fire alarm condition.
Delayed	✗	✗	✓	Yellow	Indicates that one or more output circuits are in a delayed operating condition
Fire Protection Activated	✗	✗	✓	Red	Indicates that the circuit to fire extinguishing or other fire protection equipment has been activated or that the fire protection equipment itself has been activated.
Sounder Silenced	✗	✗	✓	Yellow	Indicates that the sounders have been silenced
Sounder Fault	✗	✗	✓	Yellow	Indicates the presence of a fault in one or more sounder wiring circuits
Sounder Disabled	✗	✗	✓	Yellow	Indicates that one or more sounders have been disabled (i.e. isolated)
System Fault	✗	✗	✓	Yellow	Indicates the presence of a system fault
Function 1	✗	✗	✓	Red/Yel	Spare function LED
Function 2	✗	✗	✓	Yellow	Spare function LED
Function 3	✗	✗	✓	Yellow	Spare function LED
Function 4	✗	✗	✓	Yellow	Spare function LED
Function 5	✗	✗	✓	Yellow	Spare function LED

The function LED Indicators are programmable and can be configured and labelled accordingly during installation and commissioning of the system.



The arrangement and definition of the Status LED Indicators depend on the country and market requirements. The functions described are the same and the most common layout is shown.

## 2.2.3 Control Buttons

  
The following table contains a list of all of the control button functions available. The buttons available on each product depend on the country of installation and specific market requirements.

Button	Description	5010	5020	5030	Access Level
	<b>More Alarms</b> Press to scroll through Zones in Alarm. The LED indicator turns on to indicate if more than one zone is in alarm.	✓	✓	✓	Available in both Level 1 and Level 2
	<b>Reset</b> Press to reset the panel from a fire alarm or latched fault condition.	x	✓	✓	Only available with Level 2 Access.
	<b>Mute</b> Press to mute the internal buzzer.	✓	✓	✓	Available in both Level 1 and Level 2
	<b>Silence</b> Press to silence the sounders.	x	✓	✓	Only available with Level 2 Access.
	<b>Resound</b> Press to re-activate the sounders.	x	✓	✓	Only available with Level 2 Access.
	<b>Evacuate</b> Press to initiate a manual evacuation and sound the alarms.	x	x	✓	Only available with Level 2 Access.
	<b>LED Test</b> Press to illuminate ALL LED indicators	x	x	✓	Available in both Level 1 and Level 2
	<b>Disable</b> Press to disable the zone or device in a fire alarm condition (Australia only).	OPT	OPT	OPT	Only available with Level 2 Access.
	<b>Function Button</b> Programmable function – an associated LED indicator can also be programmed	x	x	✓	Depends on Programming

## 2.2.4 Navigation Buttons

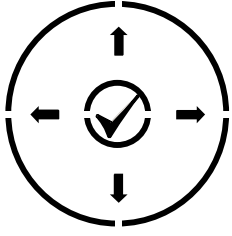	<p>←↑↓→</p> <p>Press to scroll through Menu Options. Press to display more information. Press to scroll through lists of zones or devices.</p>
	<p>Press to confirm entry of numeric or letter information entry. Press to confirm selection of a menu option. Press to change some of the configuration options.</p>

## 2.2.5 Number and Letter Buttons

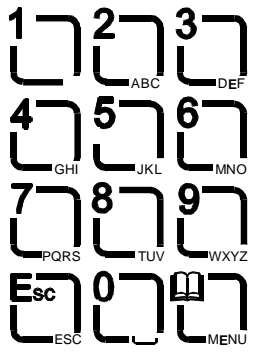	<p>Used to enter numbers or letters.</p>
<p>Esc</p>	<p>Press to return to a previous menu. Press to exit the menu functions and return to the normal display.</p>
<p>Menu</p>	<p>Press to show or return to Menu Functions.</p>

## 2.2.6 Buzzer

The buzzer produces two different sounds to differentiate between fire alarm conditions and fault conditions.

Condition	Operation
Fire Alarm	The buzzer operates with a continuous tone.
Fault	The buzzer operates intermittently.

## 2.3 Access Levels

The panel operation is protected from inadvertent and erroneous misuse by means of four access levels. These levels are as follows:

- Level 1 Untrained user
  - Level 2 Authorised User
  - Level 3 Service and Maintenance Engineer
  - Level 4 Service and Maintenance Engineer – Special Tools required
- A Level 1 Untrained User can view the current operational condition of the system and may MUTE the internal buzzer.

**NOTE:** Depending on the configuration settings, a Level 1 user may also be permitted to EVACUATE and/or SILENCE and/or RESET the system by pressing the appropriate button and entering a password.

- A Level 2 Authorised User can view the operational condition of the system and may MUTE the internal buzzer. In addition, the SILENCE, RESOUND and RESET buttons are enabled and access to the Level 2 Menu functions is available. EVACUATE is also possible on the evo+5030.

**NOTE:** There are up to 10 User ID codes available, each with its own password, which can be configured with varying permissions to specific menu function options.

- A Level 3 User has access to program and configure the operation of the panel. This is described in detail in Section 4.

If the panel has an access key switch fitted, use the key in preference to the menu options shown below.


## 2.3.1 Changing from Access Level 1 to Level 2

### 2.3.1.1 Menu Access


Press the 'MENU' button. The level 1 menu will be displayed as shown below:



To enable the controls, ensure the "Enable Controls" option is highlighted and then press the ✓ button. The display then requests entry of the Level 2 or 3 passwords as follows:

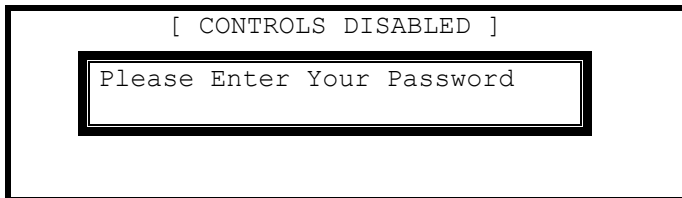


Enter the password using the number buttons and then press the ✓ button. As each number is entered, an asterisk (\*) is shown on the display. For example:

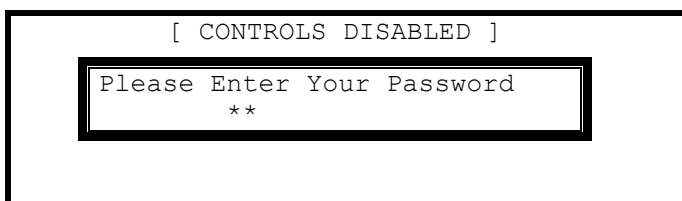

If the password is correct, the Level 2 Menu options will be shown.

If the password is incorrect, the display briefly shows the following message.

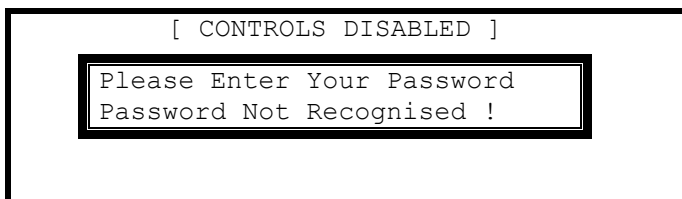

### 2.3.1.2 Control Buttons at Level 1

If any of the control buttons (Reset, Silence / Resound or Evacuate) are pressed, the display automatically prompts for the password. Enter the password as above.


## 2.3.2 Changing from Access Level 2 to 1

If the panel has an access key switch fitted, use the key switch.

Alternatively, if passwords are used, select the “Disablement” menu and then select “Disable/Controls” – refer to User Manual NT680-166 for full details.

## 2.4 User Menu Functions

When Level 2 is enabled, the following User Menu is shown.

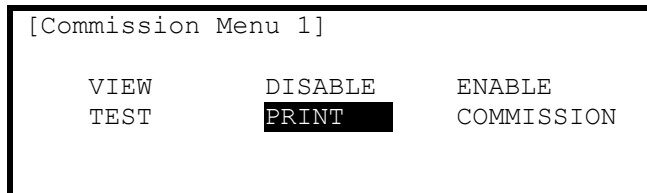

When a menu is displayed, use the  $\leftarrow \uparrow \downarrow \rightarrow$  buttons to highlight the required menu option and then press the  $\checkmark$  button to select it.

Press the ‘Esc’ button from within a menu option to return to the previous menu.

The display can be forced back into status mode by pressing the ‘Esc’ button when at the top level commissioning menu (or by waiting 60s).

### 2.4.1 View

Refer to User Manual NT680-166 for further information.

The following options can be viewed:

- ◆ Fire Alarms
- ◆ Fault Conditions
- ◆ Other Alarm Conditions
- ◆ Disablement Conditions
- ◆ Inputs
- ◆ Outputs
- ◆ Network
- ◆ Software Versions

### 2.4.2 Disable

Refer to User Manual NT680-166 for further information.

The following options can be disabled:

- ◆ Zones / Inputs
- ◆ Outputs
- ◆ Delay Mode
- ◆ Groups

### 2.4.3 Enable

Refer to User Manual NT680-166 for further information.

The following options can be disabled:

- ◆ Zones / Inputs
- ◆ Outputs
- ◆ Delay Mode
- ◆ Groups



## 2.4.4 Test

Refer to User Manual NT680-166 for further information.

The following functions can be tested:

- ◆ Zones / Inputs
- ◆ Display
- ◆ Buzzer
- ◆ Printer (if available – evo+5030 only)

## 2.4.5 Print

The evo+5030 can support an external printer connected via the RS232 I/F.

Refer to User Manual NT680-166 for further information.

## 3 Installation

### 3.1 Identification of Parts

The following diagrams show the major parts of the panels.


#### 3.1.1 evo+5010 / evo+5020

The evo+5010 and evo+5020 comprise of a back box, chassis plate electronic assembly and a cover.

The chassis plate is fixed to the back box with two screws.

The cover is fixed to the back box with two hex (Allen) key screws.

The cover earth lead must be connected to the spade terminal in the back box.

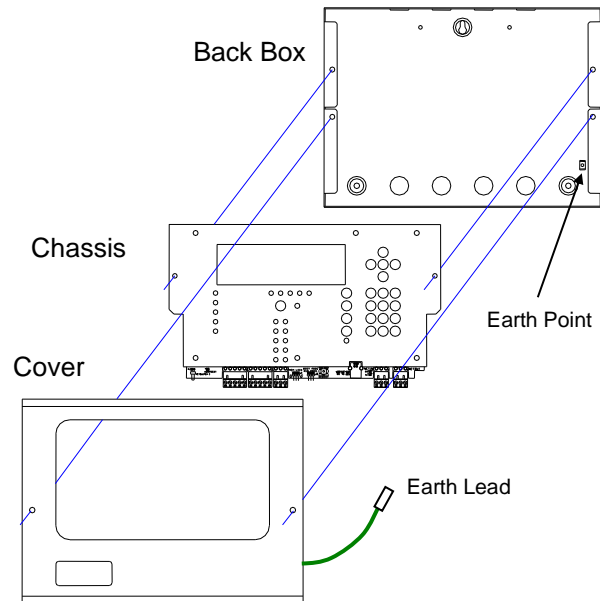


#### 3.1.2 evo+5030

The evo+5030 comprises of a back box, chassis plate electronic assembly and a cover.

The chassis plate is fixed to the back box with two screws.

The cover is fixed to the back box with two hex (Allen) key screws.

The cover earth lead must be connected to the spade terminal in the back box.

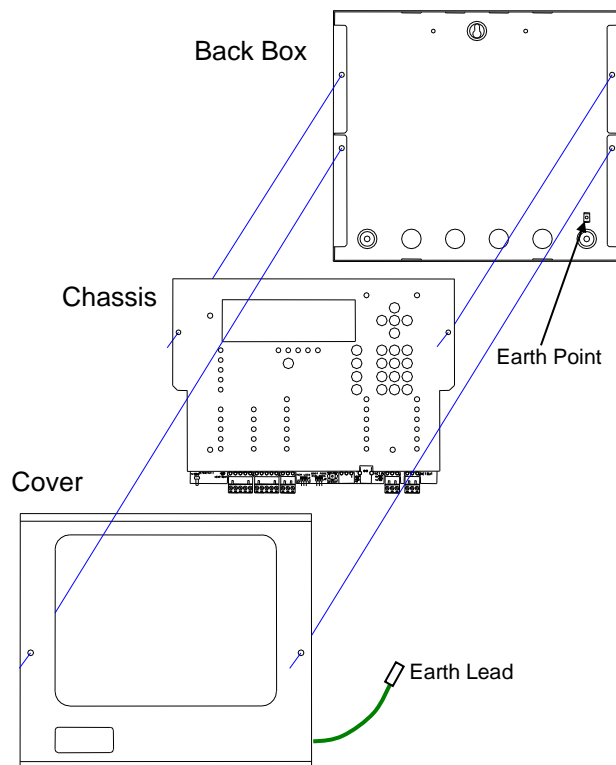

## 3.2 Installing the Enclosure



Use the appropriate fixing hardware to secure the panel to the wall. See table below for maximum weights.

Enclosure	Weight	Maximum Battery	Overall Maximum Weight
evo+5010	2.1kg	N/A	2.1kg
evo+5020	2.1kg	N/A	2.1kg
evo+5030	2.5kg	N/A	2.5kg

### 3.2.1 Opening the Enclosure Cover

The enclosure covers are fixed with two screws – use the supplied Allen key. Detach the earth lead from the back box to completely remove. Place the cover in a safe place to prevent accidental damage and retain the fixing screws.

### 3.2.2 Removing the Chassis

It is recommended that the chassis be removed before fitting the panel to the wall. To remove the chassis: Disconnect the earth cable connecting the chassis to the spade terminal on the rear enclosure.

Remove the two screws holding the chassis to the back box and carefully remove the chassis from the rear enclosure. Place the chassis in a safe place to prevent accidental damage and retain the fixing screws.



Do not lift the chassis by holding onto any of the printed circuit cards. Hold the chassis by the metal plate only.

### 3.2.3 Mounting the Enclosure

Firstly, remove the required knockouts for the installation wiring. There are sufficient knockouts on the top of the enclosure for all installation wiring. In addition, there are knockouts at the bottom of the back wall, if required, for rear entry cabling.


The enclosure is provided with three fixing points.

The diagrams opposite and below show the positions of the three holes and dimensions of each enclosure. Use all three positions to ensure the panel is held securely to the wall.


Drill the required holes in the supporting wall using a drill bit diameter 7.0 mm and plug with a suitable 40mm or longer expansion plugs. Affix the panel to the wall with M5 screws or No.10 screws. Use appropriate fixings to support the weight including the batteries.

Ensure that there is sufficient space to allow the door to be opened when the panel is mounted.

Finally, use a brush to remove any dust or swarf from inside the enclosure.

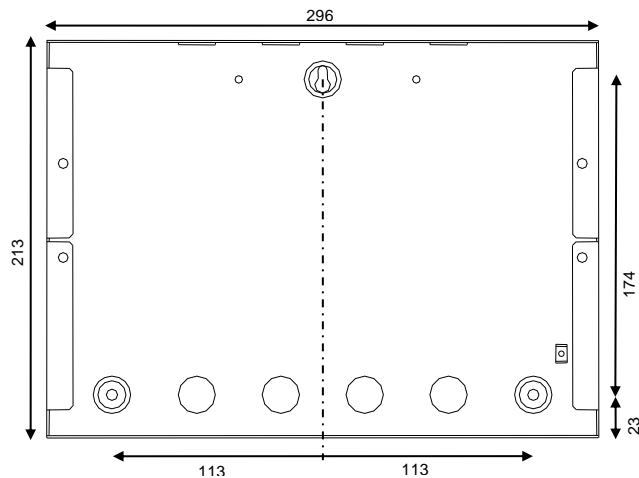

evo+5010/ evo+5020 Enclosure Size and Fixing Point Dimensions

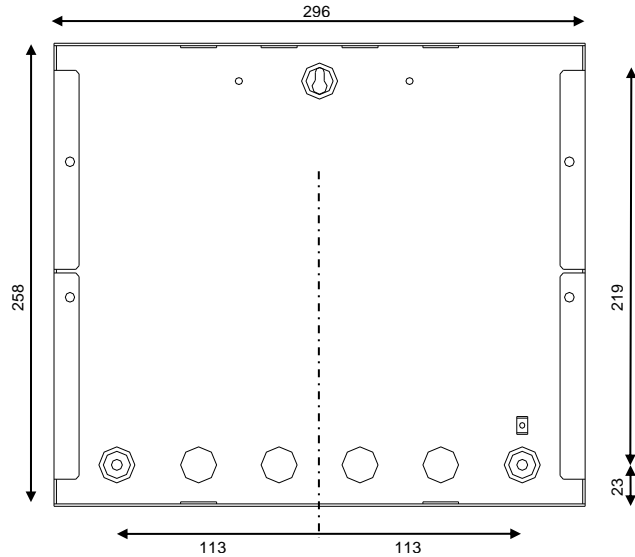

evo+5030 Enclosure Size and Fixing Point Dimensions

### 3.2.4 Remounting the Chassis

Carefully replace the chassis and fix into place using the two screws.

Reconnect the chassis earth cable to the spade terminal in the rear of the enclosure.


### 3.2.5 Recommended Cable Routing Arrangement

It is recommended that the typical routing arrangement shown in the diagram opposite be employed.

Segregate the low voltage wiring (DC Power and Network Wiring) from any AC Mains Wiring.

Refer to [Appendix 2 – Recommended Fire Rated Cables](#) for further information on cable types to be used.

Tie-wrap the cables to the back of the enclosure using the anchor points provided.

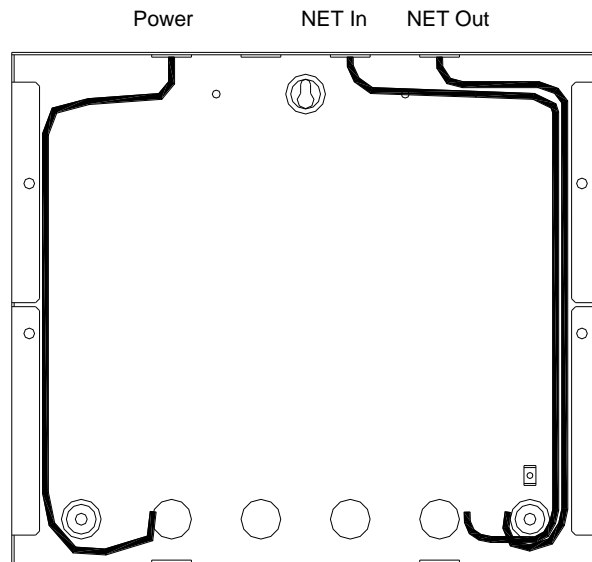

Internal arrangement showing recommended routing of cables.

## 3.3 Wiring Installation

All electrical wiring installation work should be carried out in accordance with the code of practice or applicable national standards appropriate to the country of installation.

To maintain electrical integrity of the SELV wiring on the DC Power and communications lines all SELV wiring should be segregated from the LV mains wiring and be wired using cable with insulation suitable for the application.

To minimise the effects of EMC interference all data wiring circuits should be wired with a twisted pair of conductors with a cross sectional area suitable for the loading conditions.

In areas where cabling may come into contact with high frequency interference, such as portable radio transceivers etc. the data wiring cable should be of a twisted pair construction within an overall screen. Care should be taken to correctly terminate this screen, refer to the appropriate sections of this manual for further information for each circuit type.

NB: Minimum / Maximum cable size for all external connections is limited to 0.5mm<sup>2</sup> / 2.5mm<sup>2</sup> (22-14AWG).


### 3.3.1 DC Power Installation

The main electronics requires a 24V DC supply – this must be a Safety Extra Low Voltage (SELV) supply provided by an EN54-4 certified PSE.

The connectors are symmetrical and reversible. The power supply can be distributed to the next unit if required.



The enclosure must be connected to the supply earth through the power cable.

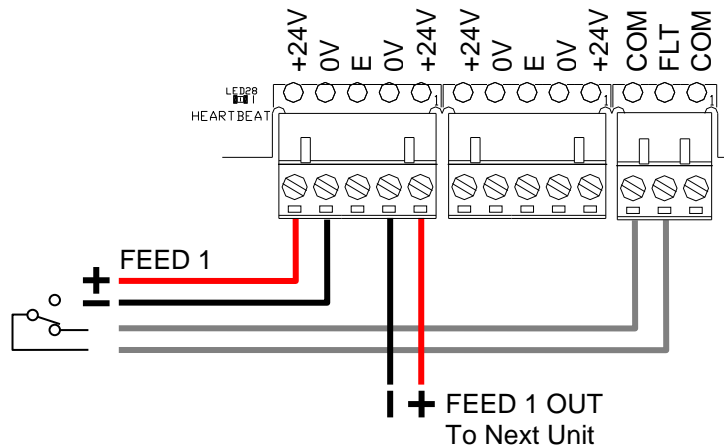


Either one (default) or two feeds can be used.

EN54-4 Clause 6.4 requires that two separate feeds when the PSE is housed in a separate cabinet. The feeds should be run in separate cables for integrity.

Each feed can be monitored and a fault is registered on the loss of any one feed. Monitoring of the second feed can be turned on / off (programming).

A common separate PSE fault input can also be connected to the panel to indicate other PSE failures such as charger failure, battery missing, etc.

This should be arranged for fail-safe operation with the contacts closed under no fault conditions. If not used, short the FLT and COM terminals with the link provided.

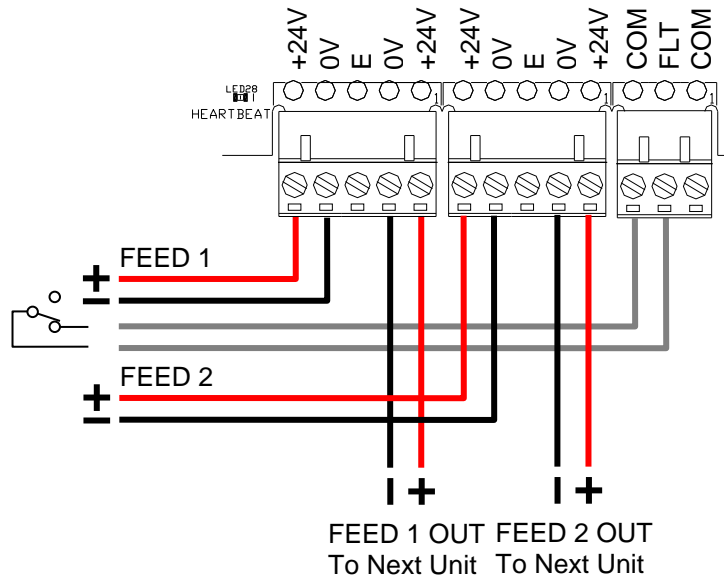

### 3.3.2 Network Interface

The network permits the connection of other panels, remote terminals and other devices to complete a distributed system.

 
 

The Remote Terminal is available as either a (STD) standard network interface peripheral or as an (FT) fault tolerant network interface peripheral. All network nodes must be installed with the same type of interface.

Cable must be twisted pair 18AWG or 20AWG.

Screened type cable is recommended (e.g. Belden 8760, 8762). Connect the screen to the designated terminal block positions only.

Do not connect cable screen to earth.


Each card has independent connectors for the outgoing and incoming network cable. Using a twisted-pair cable, connect from the "OUT" socket on the first panel to the "IN" socket on the next panel as follows.

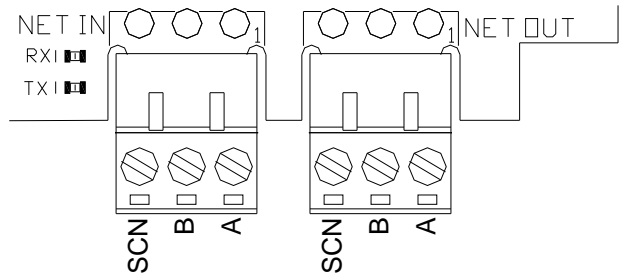

STD (Up to 32 nodes)

The "IN" terminals on the first node and the "OUT" terminals on the last node are not used. Connect an ELR (150Ω) resistor between A and B on the terminal blocks of the unused sockets.

Maximum cable length (overall length) is 1500m using recommended cables.

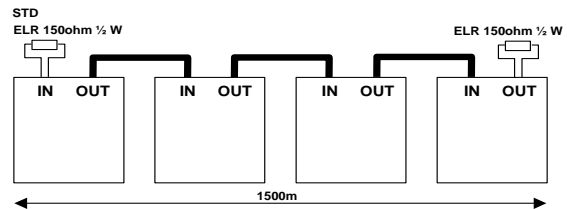


FT (Up to 200 nodes)

Other Network devices must be fitted with a FT type adaptor card.

Install a cable from the last node "OUT" terminals back to the first node "IN" terminals to form a ring.


Maximum cable length between nodes is 1500m using recommended cables. Maximum cable length (overall length) is 20000m using recommended cables.

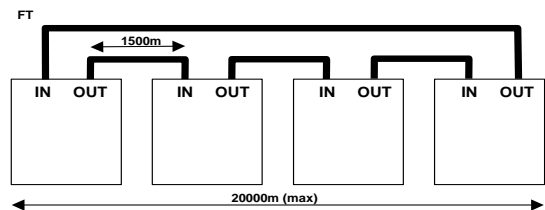

### 3.3.3 Switch Inputs

One key-switch input is provided as standard.

An aperture is provided in the cover to mount the key-switch. The function is programmable but typically used for "Access Enable".

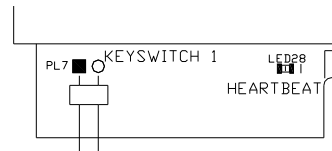


### 3.3.4 RS232 Interface

The evo+5030 is equipped with an isolated RS232 I/F Circuit at the bottom of the base card.

The terminal block connections are shown opposite.

TX = Transmit Data from the panel, RX = Receive Data into the panel, GND = Ground Reference.

This interface can be used for connection to a modem, PC or external printer.

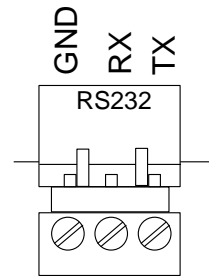

Base Card Connections – typical.

### 3.3.5 USB Interface

The evo+5000 Series Remote Terminals are equipped with an isolated USB I/F Circuit.

This can be used for connection to a PC for use of the PC Configuration Tool.

The USB Interface uses common signals with the RS232 Interface (if available) – plugging in a USB connection disconnects and isolates the RS232 Interface.

## 4 Programming

### 4.1 Introduction



These instructions cover the configuration and programming of the panels.

Where you see the “PC Only” symbol, these features can either only be set-up using the PC Configuration Tool or there are additional options that are only available via the PC Configuration Tool.

#### 4.1.1 Access Levels

The panel operation is protected from inadvertent and erroneous misuse by means of four access levels. These levels are as follows:

- Level 1 Untrained user
- Level 2 Authorised User
- Level 3 Commissioning, Service and Maintenance
- Level 4 Commissioning, Service and Maintenance – Special Tools Required

This document covers the Level 3 functions. For details on the operation and use of the panel at Levels 1 & 2, refer to User Manual 680-166. Full details are supplied with the special tools.

A level-3 password is required to enter the commissioning menus. For details of Passwords, refer to Section [Error! Reference source not found.](#)



Level-3 Passwords.

If this number is lost, it is not possible to enter commission mode functions. Refer to section [6.1](#) for further formation.

Default  
7654


#### 4.1.2 Memory Lock

The configuration memory may be protected against inadvertent change by means of a memory lock.

Before making any configuration data changes, move the jumper strap to the OPEN position.

After all changes have been made, move the jumper strap back to the CLOSE position to protect the memory against inadvertent change.


Refer to the diagram opposite for information on the jumper settings.

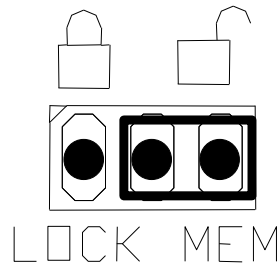

Typical View – Unlocked

#### 4.1.3 Navigating through menus

The display will revert to status mode after 60s. Press the ‘Menu’ button to restore the display.

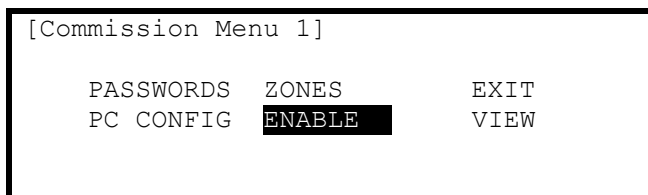

When a menu is displayed, use the buttons to highlight the required menu option and then press the button to select it.

Press the ‘Esc’ button from within a menu option to return to the previous menu.





The display can be forced back into status mode by pressing the 'Esc' button when at the top level commissioning menu (or by waiting 60s).

### 4.1.4 Changing Text Descriptions

Various parameters can have a text description defined. These include loop devices, zones, etc. The zone and device text descriptions will be shown on the display in the Fire Alarm, Fault and Warning Conditions, etc. to provide a quick and clear indication of the source of the problem.

To change the text description, first highlight the text description within the appropriate programming option and then press the ✓ button. The display then changes to show the text entry dialogue screen. For example:

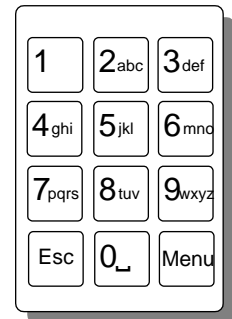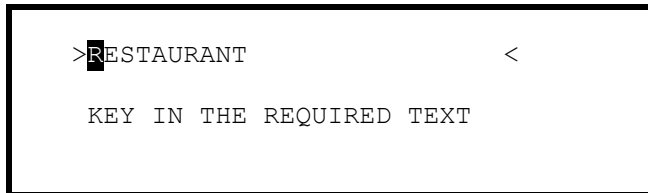

The method of entering the characters is similar to the method employed on mobile telephones. The number buttons provide both their appropriate number and several letters of the alphabet. An example of the keypad is shown opposite.

For example, Button 2 allows entry of the number 2 and letters A, B and C.

When a button is pressed, the first character is shown on the display at the current cursor position. If the button is pressed again within ½ second, the second character replaces the first. A further press displays the third available character and so on – see table below. After pressing the button to obtain the required character, wait for 1-second and the character will be entered and the cursor will move to the next character in the text description.

Pressing another button will immediately enter the previous character and move the cursor on to the next character.

Use the ←→ buttons to move backwards or forwards along the line. When the text description is as required, press the ✓ button to confirm the change.

If the text has been entered incorrectly, press the 'Esc' button to cancel all changes and return to the previous display.

The following table shows the numbers, characters and symbols assigned to each button on the keypad.

Button	1 <sup>st</sup> Press	2 <sup>nd</sup> Press	3 <sup>rd</sup> Press	4 <sup>th</sup> Press	5 <sup>th</sup> Press	Further Characters
1	1					
2	A	B	C	2		Ä, Æ, Å, À, Á, Â, Ã, Ç
3	D	E	F	3		È, É, Ê, Ë, Æ
4	G	H	I	4		Ì, Í, Î, Ï
5	J	K	L	5		
6	M	N	O	6		Ö, Ø, Ò, Ó, Ô, Õ, Ñ
7	P	Q	R	S	7	
8	T	U	V	8		Ù, Ú, Û, Ü
9	W	X	Y	Z	9	Ý, Þ
0	Blank	0				

Alternatively, press the ↑↓ buttons to scroll through a list of characters. When the required character is shown, press the → button to move on to the next character. The list of characters available and the order of presentation is as follows:

Blank !"#%&'()\*+,-./ 0123456789 :;=<?@ ABCDEFGHIJKLMNOPQRSTUVWXYZ [ ] ^ \_

### 4.1.5 Numeric data entry

Numbers are entered by moving to the required field, and then typing in the required number, followed by the ✓ button.

If the number is entered incorrectly, press the ‘Esc’ button to restore the previous number.

## 4.2 Level 3 Menu Functions

The following table gives a list of the Level 3 Menu Functions, the sub-functions available within each main function and a brief description for each function. The menu options are available on three pages – select “Next Menu” to switch between pages.

Main Menu Option	Sub Menus	Comments	
3	ZONES	--	Configure the Zone texts.
	EXIT	--	Cancel Level 3 Access and return to Level 2 Menu Options.
	VIEW	Fires	View Zones and Inputs that are reporting a fire alarm condition.
		Faults	View Zones and Inputs that are reporting a fault condition.
		Alarms	View Zones and Inputs that are reporting an alarm condition during test.
		Disabled	View Zones, Inputs and Outputs that are disabled.
		Inputs	View the current state of Zones and Inputs.
		Outputs	View the current operational condition of all output circuits.
		Network	View Network Diagnostics.
2	PASSWORDS	--	Configure the Level 2 and Level 3 passwords.
	PC-CONFIG	--	Enable the PC Link for transfer of configuration data to and from the panel.
1	SETUP	--	Configure General Operating Parameters.

### 4.2.1 PC ONLY Functions

The following features can only be configured using the PC Configuration Tool.

- ◆ Programmable Buttons
- ◆ Programmable LED Indications
- ◆ LCD Back Light Dimming Control
- ◆ Investigation Delays
- ◆ DC Power Feeds – one or two
- ◆ User access permissions

The following must also be considered for full compliance and indication in accordance with the requirements of EN54-2

#### 4.2.1.1 Fire Protection Indications



If fire protection outputs are configured on the Mx-5000 panels, then configure two of the front panel “Function” LED indicators to indicate the fault and the disabled states of these outputs.

#### 4.2.1.2 Beacons



If beacon outputs are configured so that they can be independently disabled / enabled, then configure one of the front panel “Function” LED indicators to indicate the disabled state of these devices.

## 4.3 Recommended Programming Procedure

The main programming steps required will necessarily be different for each installation. However, the following is the minimum recommended.

- ◆ Step 1 – SET-UP, Define General Set-up Information (Phone Numbers, etc.).
- ◆ Step 2 – PASSWORDS, Define Level 2 and Level 3 Passwords as required.
- ◆ Step 3 – ZONES, Enter Zone Texts as required.

### 4.3.1 Zones

The Commission Zones option lists all the zones in use by this panel and allows the zone text description to be changed.

[Commission Zones]	
Zone	Location
0001	BASEMENT WEST
0002	RECEPTION
0015	EAST WING
0018	TOWER BLOCK

To change the location text assigned to the Zone, press the ✓ button when the Zone Location Text is highlighted. Refer to Section [Error! Reference source not found.](#) for guidance on how to change text descriptions.

To select a different zone, use either the scroll up/down keys, or just type in the number of the required zone, followed by the ✓ button. Note that only zones in use are displayed.

### 4.3.2 Exit

To exit the Commission Mode and return the panel to normal operation (i.e. level 2), select the “Exit” option. The display will prompt for confirmation of the Level 3 password. For example:

[Commission Menu 1]	
Please Enter Your Password	
Next Menu	

If the password is incorrect (this will be indicated) or if the password is not entered within 5-seconds, the display will revert to the Commission Level Menu and level-2 will not be entered.

After commissioning, the panel must always be returned to level 2 (or level 1) to give normal fire coverage.

### 4.3.3 View Options

The View Menu Options are identical to those available during Level-2 operation – refer to User Manual 680-166 for further information.

### 4.3.4 Passwords

The panel provides up to 10 User Level-2 passwords and 2 Level-3 passwords. All of the passwords <sup>1</sup> can be changed.

On entry to the function, the display shows a list of the passwords. For example:

Password	Access level	User ID
15633	2	01
9988	2	02
13344	2	03
10000	2	04
10000	2	05

To change a password, use the **↑↓** buttons to highlight the required password and then enter the new password using the **number** buttons. When the password is correct, press the **✓** button to confirm.



**Level-3 Passwords.**  
Care should be taken when changing the Level-3 password. If this new number is lost, it is not possible to enter commission mode functions.  
Refer to [6.1](#) for further information.



**The factory default level 3 password is 7654**

### 4.3.5 Time and Date

This function allows the time and date in the panel to be changed. On entry to the function, the display shows the current time and date with confirmation of the day of the week on the bottom line. For example:

[SET TIME/DATE]		
TIME =	15:28	
DATE =	15/01/09	THU 15 JAN 2009

To change the settings, use the **↑↓** buttons to highlight the required option. Directly enter the new time or date using the **number** buttons. As soon as a **number** button is pressed, the display will clear the current setting and show the new value as it is entered. For example:

[SET TIME/DATE]		
TIME =	1█:--	
DATE =	15/01/09	THU 15 JAN 2009

### 4.3.6 PC Config

The PC Link Option enables the connection of the PC Configuration Tool for retrieving configuration data from the panel and programming configuration data from a file on the PC.

For further information, refer to the Manual supplied with the PC Configuration Tool.

### 4.3.7 Setup

The Setup Options Menu enables the configuration of panel generic operating parameters. When the option is selected, the display shows a list of the available parameters. For example:

<sup>1</sup> The passwords can be further qualified using the PC CONFIG TOOL to provide permission / restriction to specific menu options. See User Manual 680-166 and PC CONFIG TOOL Manual for further details.

```
[Setup]
THIS NETWORK NODE : 0
NEXT NETWORK NODE : 0
PANEL ZONE       : 100
SERVICE NUMBER  : 01234 567890
```

Use the **↑↓** buttons to scroll through the list of options. The following will then be shown:

```
[Setup]
SERVICE DUE DATE : 1 JAN 2011 10:00
TRACE LOGGING MODE : STANDARD More>
DETECTOR BLINKING : NONE
COMPANY LCD LOGO  : ✓
```

#### 4.3.7.1 Network

This Network node is set to 0 as default. For panels in a networked application please refer to the Network document, reference: 680-502.

#### 4.3.7.2 Panel Zone

By default all the panel inputs are assigned to the Panel Zone. Alternatively the PC configuration program allows individual inputs to have different zones if required.

#### 4.3.7.3 Service Number

The Service Number is the telephone number that is shown on the status display whenever a fault condition is accepted. To change the number, press the **✓** button when the option is highlighted. The number is entered using the text entry facility; refer to Section **Error! Reference source not found.** for guidance on how to enter text.

#### 4.3.7.4 Service Due Date

The next service (over) due date can be entered into the panel memory. When this date is reached, the panel will enter a fault condition to alert the site operator that a service visit is overdue. To change the due date, press the **✓** button when the option is highlighted. The display prompts for entry of the next service date. For example:

```
[NEXT SERVICE DUE]
TIME = 12:00
DATE = 24/04/12
```

Use the **↑↓** buttons to select between the time and date. Use the number buttons to enter the required time or date.

As soon as a new service date is entered, the panel will cancel any Service Due Fault condition.

#### 4.3.7.5 Trace Logging Mode

The Trace Logging Option determines what type of information and to what level is stored in the Event Log.

There are three options:

STANDARD = the normal operating mode logging fire alarm, fault and warning conditions as they occur.

STANDARD + = an extended version of the standard operating mode where the removal of fault and warning conditions are also logged.

DIAGNOSTIC = a full diagnostic trace of all conditions with greater depth to aid diagnosis of fault conditions.

To change the option, press the **✓** button.

To erase the event log, press the → button to view the additional command option as follows:

```
[Setup]
TRACE LOGGING MODE : Wipe Event Log
DETECTOR BLINKING :
COMPANY LCD LOGO :
PROGRAM ID :
```

Press the ✓ button and the display will show that the event log is being erased by display the message “WORKING...” After the event log is erased, the display reverts to the Set-up Options screen.

#### 4.3.7.6 Resound

The Resound option defines whether silenced sounders shall resound when either a new zone is in alarm (default EN54-2 setting) or a new device is in alarm.

#### 4.3.7.7 Config Data

The Config Data option shows the loop protocol selected and the checksum for the configuration data. A note of this number can be taken and then checked on the next service visit to see if any changes have been made to the configuration data.

```
[Setup]
CONFIG DATA : More>
```

To view the Config Data Checksum, press the → button. The display then shows:

```
[Setup]
CONFIG DATA : CGF= 351677 <More>
```

In addition, there is an option to erase the Config Data. Press the → button. The display then shows:

```
[Setup]
CONFIG DATA : ERASE CONFIG <More>
```

Press the ✓ button. A pop-up menu will be shown to confirm whether the configuration data shall be erased.

## 5 Service and Maintenance

### 5.1 Maintenance Schedule

This equipment should be maintained in accordance with the regulations and codes appropriate to the country and location of installation. The following is recommended if no other regulations apply.

#### 5.1.1 Daily Actions

The site operator / user should perform the following checks and actions:

- a) The panel indicates normal operation. If any faults exist, these should be recorded in a logbook.
- b) Any recorded faults have received attention and have been signed off.

#### 5.1.2 Monthly Actions

The site operator / user should perform the following checks and actions:

- a) Any stand-by generators should be started and fuel levels checked.
- b) Operate at least one call point or detector (from different zones each month) and check that the panel enters a fire alarm condition and that the appropriate / programmed alarm or warning devices are sounded / operated. Where permissible, this should include any links to the fire brigade or remote centre.
- c) Check that all outstanding faults have been recorded and have received attention.

#### 5.1.3 Quarterly Actions

The service / maintenance contractor should perform the following checks and actions:

- a) Check that all entries in the logbook have been addressed, check the event log in the panel and take the necessary remedial actions.
- b) Visually inspect the panel for any moisture ingress or other deterioration, check all battery connections and test / check the alarm, fault and other functions of the panel operation.
- c) Ascertain if any building or structural alterations have been carried out that would affect the placement / location of call points or detectors. If so, perform a visual inspection.
- d) Record in the logbook any defects or remedial actions that must be undertaken and arrange for these to be carried out as soon as possible.

#### 5.1.4 Annual Actions

The service / maintenance contractor should perform the following checks and actions:

- a) Perform the checks as recommended above in the daily, monthly and quarterly schedules.
- b) Perform a complete "Walk Test" of the system to check that each call point and detector is operating to its manufacturers' specification.
- c) Visually inspect all cable fittings. Check that the equipment is undamaged and that the conditions of installation have not changed such that they fall outside of the equipment specifications.
- d) Inspect and test all batteries and replace as required – refer to Section 5.2 for recommended replacement schedule.
- e) Record in the logbook any defects or remedial actions that must be undertaken and arrange for these to be carried out as soon as possible.

## 5.2 Replacement of Components

In general, all of the components parts used in the construction of the panel have been selected for long life and reliability.

However, certain components may require to be changed on a regular service basis. The details of these are as follows:

### 5.2.1 Liquid Crystal Display

- Expected Life: - > 10 years
- Replacement Schedule: - When the display becomes difficult to read. The display contrast will gradually fade with time.
- Manufacturer / Part Number: - Replace the complete display / keyboard assembly.

### 5.2.2 Spares

Part Number	Description
MXS-506	evo+5010 PCB
MXS-507	evo+5020 PCB
MXS-508	evo+5030 PCB

For all other items, please refer to the sales part list for the sales item part number.




## 6 Appendices

### 6.1 Appendix 1 – Forgotten Level 3 Password

Should the Level-3 password be forgotten, contact Customer Support to obtain a temporary permit number to regain access to the panel programming functions.

Customer Support will require a decryption key displayed by the panel. To obtain this number, attempt to gain access to the Level-3 Programming Functions entering “1” when prompted for the password. As soon as the “Password Invalid” message is shown, press the “0” button and the display will show a decryption key. Make a note of the first part of this number.

For example:

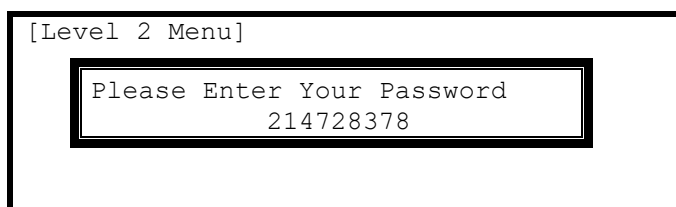

Customer Support will provide a temporary permit number that you can enter when prompted for the Level-3 password. As soon as access has been regained to the Level-3 Programming Functions, select the Passwords Menu Option and check / change the Level-3 password. (Refer to Section [Error! Reference source not found.](#) for further information).

## 6.2 Appendix 2 – Recommended Fire Rated Cables

The following table provides a list of suitable fire rated cables with standard (30 minute) and enhanced (120 minute) classification. Refer to Document No. 680-088 for an up to date list.

Manufacturer	Cable Type	Core Sizes (mm)			5839-1 Rated		Net
		1.0	1.5	2.5	S <sup>(30)</sup>	E <sup>(120)</sup>	
AEI	Firetec Multicore Ref. F1C	✓	✓	✓			✓
AEI	Firetec Armoured Ref. F1C	✓	✓	✓			✓
Calflex	Calflex CWZ (2.5mm <sup>2</sup> )			✓			
Cavicele SpA	Firecel SR/114H	✓	✓		✓		
Cavicele SpA	Firecel SR/114E	✓	✓	✓		✓	
Draka	Firetuf (OHLS) FTZ	✓	✓		✓		✓
Draka	Firetuf PLUS	✓	✓	✓		✓	
Huber & Suhner	Radox FRBS/M1x2		✓	✓			✓
Irish Driver-Harris Co Ltd	Kilflam 2000	✓	✓	✓	✓		
Irish Driver-Harris Co Ltd	Kilflam 3000	✓	✓	✓		✓	
Pirelli	FP200 Flex (1.0mm <sup>2</sup> )	✓					✓
Pirelli	FP200 Gold (1.0mm <sup>2</sup> )	✓	✓	✓	✓		✓
Pirelli	FP PLUS	✓	✓	✓		✓	
Tratos Cavi SpA	FIRE-safe TW950	✓	✓	✓	✓		
Tyco Thermal Controls	Mineral Insulated Twin Twisted PYRO-E CCM2T	✓	✓	✓			✓
Tyco Thermal Controls	Pyrotenax Served Mineral Insulated Cable (light and heavy duty)	✓	✓	✓		✓	
Tyco Thermal Control	Pyro-S	✓	✓	✓	✓		
Wrexham	Mineral Insulated Cable (light and heavy duty)	✓	✓	✓		✓	

### 6.2.1 Network Cables

For a list of recommended cables, refer to the AdNeT document 680-502.



**NITTAN**

Document: NT680-185 REV: 02

**Nittan Europe Ltd.**  
Hiple Street,  
Old Woking,  
Surrey, GU22 9LQ  
United Kingdom

**Tel:** +44 (0) 1483 769 555  
**Fax:** +44 (0) 1483 756 686  
**Email:** [sales@nittan.co.uk](mailto:sales@nittan.co.uk)  
**Web:** [www.nittan.co.uk](http://www.nittan.co.uk)